

How to use the IRLP Node 6095 set up on 438.700mhz Whangarei Repeater

438.700mhz - 5mz split

- First make sure you have the CTCSS activated on your radio for this frequency using a tone of 123 hz
- Check the repeater is not being used. Announce your call sign saying you will be using the IRLP repeater.
- Key the transmitter and from your DTMF keypad on your transceiver enter the 4 digit number of the node you wish to connect to.
- If connection is successful you will be notified via a voice prompt.
- After you have finished using the IRLP Repeater - from your DTMF keypad on your transceiver enter 73 to disconnect the node. Use your call sign as you would normally with any QSO.
- [Click here for IRLP.net with more information on the 6095 Node, coverage and commands.](#)
- [Link to Nodes by country](#)

Node 6095